



Operator's Manual: MUSIC VIDEOS

Model TEN O SIX Wall Mounted Video Jukebox

Table of Contents

Introduction.....	4
<i>Important Notes:</i>	4
<i>Features</i>	4
<i>Main Components</i>	5
Specifications.....	6
Wall Mounting	7
<i>Tools required</i>	7
<i>Inspecting accessory pack</i>	7
<i>Selecting a suitable location</i>	8
<i>Mounting jukebox</i>	8
Removing bracket	9
Measuring for wall placement	9
Attaching bracket to wall	9
Attaching jukebox to bracket.....	10
Securing jukebox to bracket.....	11
<i>Mounting wired remote control (optional)</i>	11
Connecting to Video Display and Sound System	13
<i>Tools required</i>	13
<i>About connection jack panel</i>	13
<i>Connecting to video display</i>	13



- Connecting through venue’s cable service 13
- Preparing channel insertion block..... 14
- Connecting the channel insertion block 14
- Connecting to a single monitor 15
- Connecting to stereo sound systems (if separate left and right channels are desired) 15*
- Connecting the Amplifier 16**
- Connecting to Internet and Remote Controls 17**
 - Tools required..... 17*
 - About data connections..... 17*
 - Network and wired remote control connections 17*
 - RF remote control..... 18*
 - Changing the RF Remote frequency 19
- Operating the Unit 20**
 - Powering unit for first time..... 20*
 - Setting the channel frequency modulator 20*
 - Microphone ducker 21*
 - Using the wired remote controller..... 21*
 - Rebooting the CPU 22*
 - Testing equipment after initial set up..... 22*
- Playing Videos 23**
- Operator Console 27**
 - Operator Home Page..... 27*
 - System Settings Screens 27*
 - Money Screens 29*
 - Music Screens 33*
 - Information Screens 37*
 - Reports 39*
- Servicing the Unit..... 40**
 - Content updates for venues with dial-up Internet connections 40*
 - Routine maintenance..... 40*



Exterior 40
Interior..... 40

Troubleshooting 41

Problem..... 41

Jukebox has no power 41
Front panel lights out 41
Touchscreen display out 41
Touchscreen display frozen 41
Touchscreen does not respond correctly..... 41
Cannot download updates 41
Will not accept coins..... 42
Will not accept bills 42
No sound from speakers..... 42



Manual: Model TEN O SIX Wall Mounted Video Jukebox

Introduction



Important Notes:

- Do not discard shipping pallet
- Team lift only
- Mount only to surfaces capable of supporting 250 lbs
- Unit is electrical: do not expose to moisture
- Unit must remain plugged in to a working electrical outlet continuously
- **DO NOT PLUG UNIT INTO WALL SOCKET UNTIL DIRECTED TO DO SO**



Features

- Operators have total control over content and pricing
- Users can select from a local selection of 1000 videos and 2000 audio tracks
- Accepts 1, 5, 10 and 20 dollar bills
- Accepts credit/debit cards and stored value cards
- Accepts quarters
- High-speed Internet access enables users to download audio on demand
- Music catalog updates via off-peak downloading
- Music videos stored on the machine will be instantly available for selection